

Risk Assessment – Goods Lift

Notes:

- 1. The people that might be harmed: Studioworks employees, contractors, public, artists.
- 2. The goods lift is installed in the Storage Wedge at Television Centre and provides access to the Mezzanine Floor Level.

HAZARD	CONTROL
Failure to maintain / manage the goods lift on a day-to-day basis; resulting in system failure and / or defect.	 This risk assessment should be read in conjunction with the following BBC Studioworks documents: Operation & Maintenance Manual (original instructions) Goods Lift Health & Safety Arrangements for Mezzanine Floor Level All personnel responsible for the day-to-day use of the goods lift to receive instruction and training on the operation, with reference to the above documents.
Falling at same level or at different levels / Struck by the load or falling objects / Entrapment and/or crushing	 Keep passageways dry, clean and free of objects for the supply and removal of materials on both the ground floor and higher levels. Keep the goods lift access gates and ramps closed when not loading or unloading material. The goods lift is not designed to carry persons. Do not allow persons to remain on the lift while it is moving. Before starting the goods lift, check that there are no persons or objects protruding from the building's structure in the vertical travel of the load. Wear suitable PPE and working clothes with adjustable cuffs. Chains, loose clothes, etc., that can cause entrapment, are not recommended.
Collapse of goods lift platform and/or structure.	 Do not lift loads heavier than the maximum shown on the goods lift. If a fault is found in the operation of the hoist, lower the load to the ground if possible, unload the material and stop the machine immediately.

File: Goods Lift Version: Version 2.0 Last Reviewed: 24/07/2023 Page **1** of **2**



HAZARD	CONTROL
	 Press the emergency stop button in the event of any imminent danger. Spread the weight of the load evenly on the goods lift platform. Do not allow the load to protrude from the sides of the cage. Fix the load when it might move in the cage or exceed its height. If small, heavy loads must be lifted, place them in the centre of the platform as close as possible to the vertical mast.
Risks of use of goods lift by unauthorised persons.	 At the end of the job, lower the goods lift to the ground. Lock the 'on' switch to prevent use by unauthorised persons.